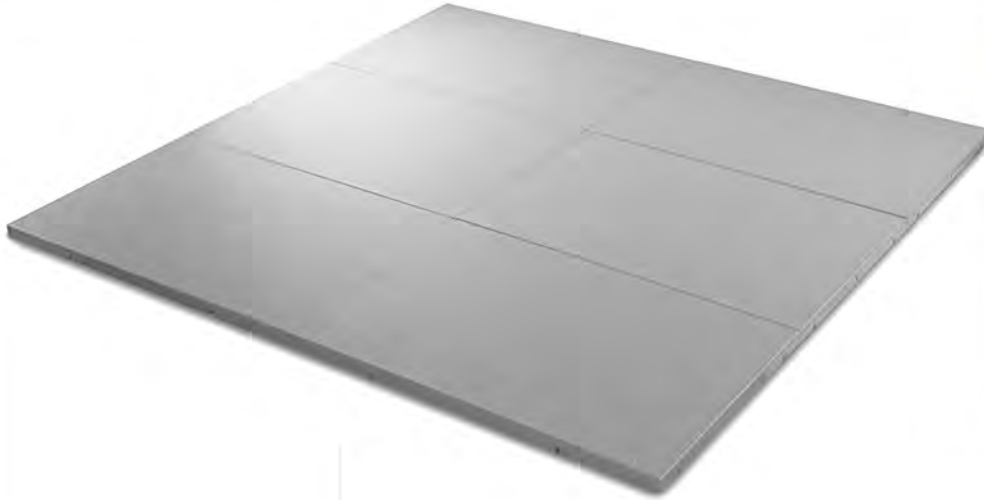


THE HANDI SPA PAD

By Confer Plastics®

ASSEMBLY, INSTALLATION AND USE MANUAL

Warranty: The Handi-Spa Pad is warranted by the manufacturer to be free from manufacturing defects for a period of FIVE [5] years from date of purchase



Scan to
see our
Installation
Videos



MADE IN U.S.A. BY



CONFER
plastics inc.

To make an 8' x 8' square pad you will need 2 cartons [6 pads]

To make an 8' x 12' rectangular pad you will need 3 cartons [9 pads]





To make a 10'-8" x 12' rectangular pad you will need 4 cartons [12 pads]

The **Handi-Spa Pad** is an all plastic pad measuring 32" x 48" that can be connected together with the supplied connectors to form a flat platform for placement of spa.

The **Handi-Spa Pad** can be drilled through to run electrical conduit if needed.

The **Handi-Spa Pad** can be placed directly on the soil, on concrete, or on a wooden deck **but surface must be level.**

Tools Required for Installation:

Drill	Shovel	Level (3+ foot)	2x4 (2x4x8 preferred)
			

Check that you have all required parts. Check the contents of the carton with the Parts List for the spa pad. All parts and hardware are required. If any parts are missing, DO NOT attempt to assemble the spa pad. Instead, call Toll Free U.S. - 800-635-3213 or visit our web site at www.conferplastics.com for assistance.

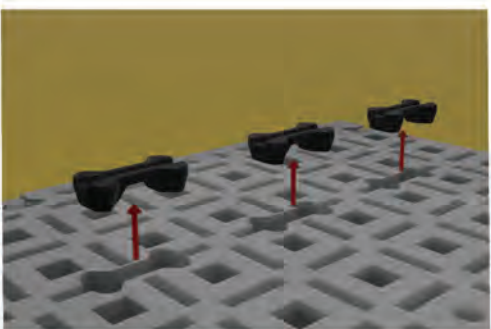
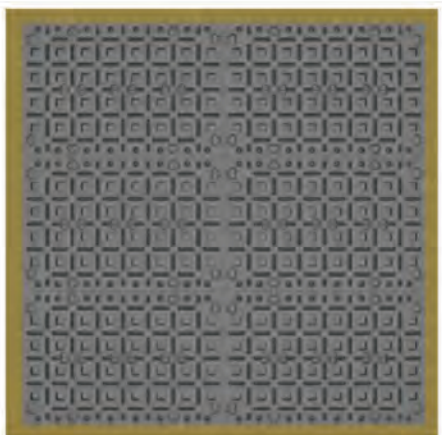
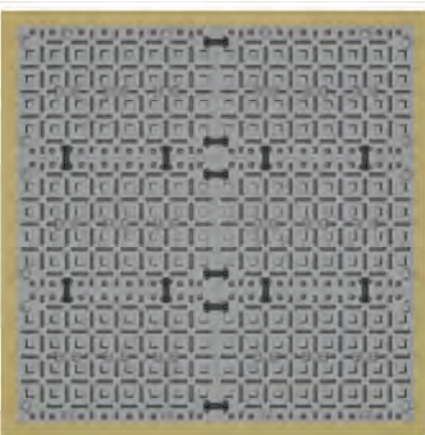
INSTALLATION

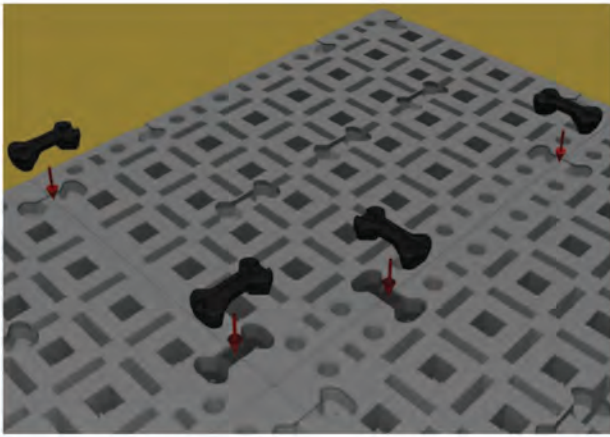
Step 1: Surface Preparation

Start the installation by removing all of the sod. If leveling is necessary, use sand or pea gravel. Place the level on top of the straight 2x4x8' and finish leveling the soil surface. Tamp the soil down to create a firm level base and verify that the area is level.

Step 2: Spa Pad Assembly

NOTE: For this portion of the installation, the pads are placed "waffle" side up. Orient the spa pads so that they can be flipped onto the prepared surface once fully assembled.

Remove all of the dog bone connectors from the spa pads and set aside.	Orient the pad as shown below:	Final installation before flipping pad and placing into position:
		



WARNING: Adjust your drill chuck to reduce the torque. Do not over torque the screws when securing the dog bones into the pad. Over torquing the screws will lead to them penetrating through to the other side of the pad.

Beginning with one of the corner pads, insert the dog bones into the recessed area around each spa pad. It may be necessary to use a rubber mallet or hammer to tap into place.



Using a drill and the provided screws, screw the dog bones into each pad. Do this for all dog bones, connecting each pad together.

Improperly Torqued Screw:

Properly Torqued Screw:



Finish by flipping the spa pad on edge, setting the “waffle side” face-down on the prepared surface. Flipping the spa pad will require at least two people. With configurations larger than 8x8, this may require more than two people.

NOTE: Ensure spa pad is orientated as it is pictured below. Make sure to flip the pad such that the center dividing line is the one that is horizontal while you’re flipping the pad, as it will be more difficult flipping it the other way.





*Complete your
backyard!*

*Purchase our
patio furniture
at
LeisureAccents.com*



 **SCAN ME**



**LEISURE
ACCENTS™**



BY:



 **MADE IN THE U.S.A. by:**
CONFER
plastics inc.®

97 Witmer Road
North Tonawanda, NY 14120-2421
Toll Free U.S. 800-635-3213
www.conferplastics.com